



# INSTALLATION INSTRUCTIONS

## ELECTRIC HEAT PACKAGES

---

**MODELS:**

<b>EHWH42-A05</b>	<b>EHWA05-A05</b>
<b>EHWH42-A10</b>	<b>EHWA05-A10</b>
<b>EHWH42-A15</b>	<b>EHWA05-A15</b>
<b>EHWH04-A05</b>	<b>EHWA05-A20</b>
<b>EHWH04-A10</b>	<b>EHWA05-B09</b>
<b>EHWH04-A15</b>	<b>EHWA05-B15</b>
<b>EHWH04-A20</b>	<b>EHWA05-B18</b>
<b>EHWH04-B18</b>	<b>EHWA05A-C09</b>
<b>EHWH05-B09</b>	<b>EHWA05A-C15</b>
<b>EHWH05-B15</b>	
<b>EHWH05A-C09</b>	
<b>EHWH05A-C15</b>	

**For 3 1/2, 4, and 5 Ton WA and WH Series  
Wall Mounted Air Conditioners  
and Heat Pumps**

---

BARD MANUFACTURING COMPANY  
Bryan, Ohio 43506

Since 1914...Moving, ahead just as planned.

Manual:	2100-254 Rev.
Supersedes:	Rev.
File:	Volume III, Tab 18
Date:	January 1995

# Contents

<b>DESCRIPTION .....</b>	<b>3</b>
<b>IMPORTANT.....</b>	<b>5</b>
<b>SHIPPING DAMAGE .....</b>	<b>5</b>
<b>UNPACKING THE ELECTRIC HEAT PACKAGE .....</b>	<b>5</b>
<b>WIRING MAIN POWER .....</b>	<b>5</b>
<b>INSTALLATION.....</b>	<b>7</b>

Copyright January 1995  
Bard Manufacturing Company  
Bryan, Ohio 43506

## DESCRIPTION

The EHWA and EHWH series electric heater packages are field installable heater packages suitable for use with Bard wall mount hi boy air conditioners and heat pumps. The packages consist of the electric heat strip, the heater control base which includes the heat contactors, and circuit breaker or pull disconnects, installation instructions and wiring diagrams. See TABLE 1 for nominal electrical data and BTU output. Before installation, check unit serial plate to insure the heater package model that you intend to install is listed as a heater package that is suitable for use with the Bard wall mount hi boy unit. See FIGURE 6.


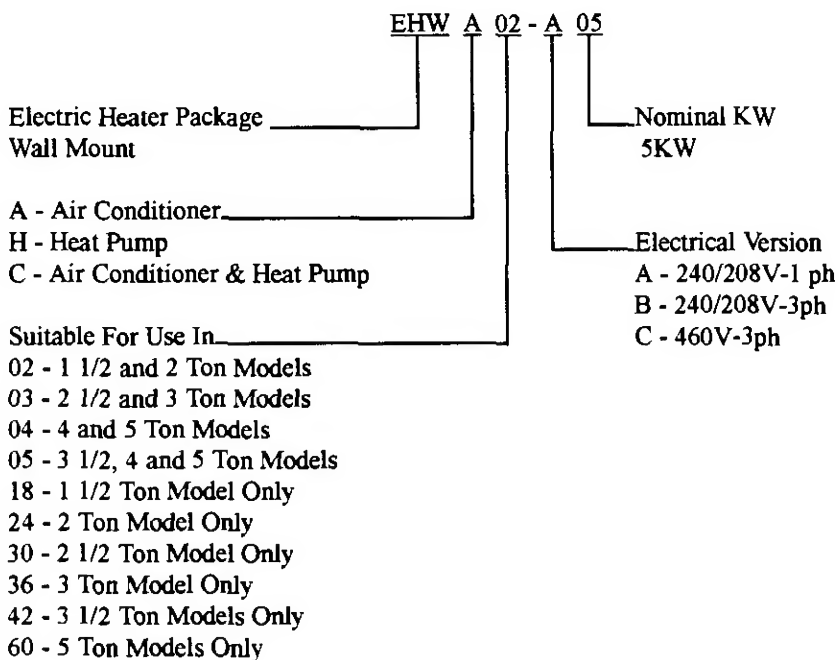


TABLE 1

Heater Package Model	Volts	Phase	Nominal KW	Nominal BTU
EHWA05-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWA05-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWA05-A15	240/208	1	15 / 11.25	51,200 / 38,400
EHWA05-A20	240/208	1	20 / 15	68,260 / 51,200
EHWA05-B09	240/208	3	9 / 6.75	30,600 / 23,030
EHWA05-B15	240/208	3	15 / 11.25	51,200 / 38,400
EHWA05-B18	240/208	3	18 / 13.5	61,430 / 46,100
EHWA05A-C09	480	3	9.00	30,700
EHWA05A-C15	480	3	15.00	47,000
EHWH42-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWH42-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWH42-A15	240/208	1	15 / 11.25	51,200 / 38,400
EHWH04-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWH04-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWH04-A15	240/208	1	15 / 11.25	51,200 / 38,400
EHWH04-A20	240/208	1	20 / 15	68,260 / 51,200
EHWH04-B18	240/208	3	18 / 13.5	61,430 / 46,100
EHWH05-B09	240/208	3	9 / 6.75	30,600 / 23,030
EHWH05-B15	240/208	3	15 / 11.25	51,200 / 38,400
EHWH05A-C09	480	3	9.00	30,700
EHWH05A-C15	480	3	15.00	47,000
EHWA60-B09	240/208	3	9 / 6.75	30,600 / 23,030

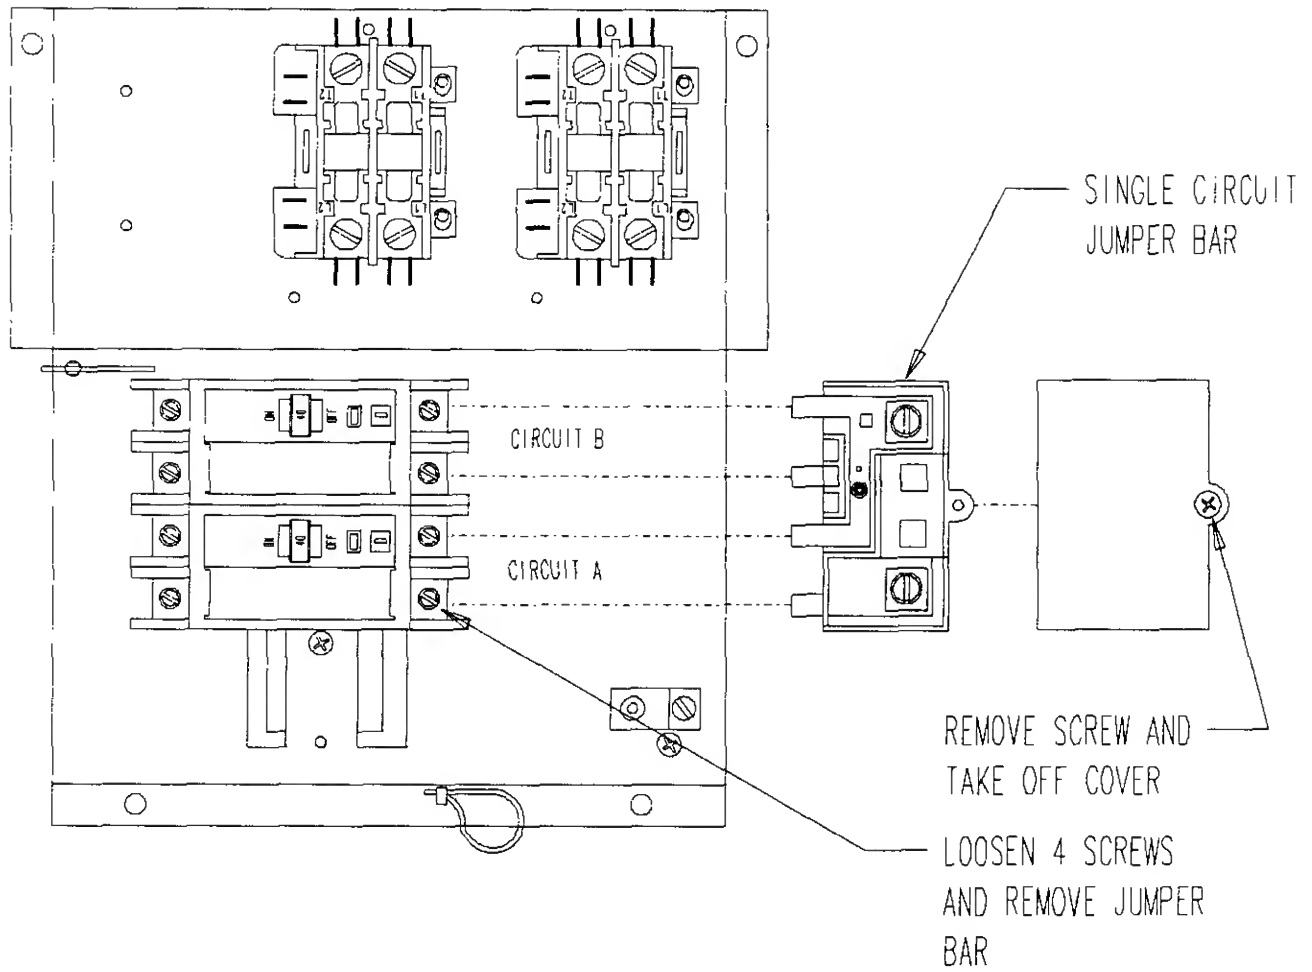FIGURE 1



MIS-365

## IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

## SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

## UNPACKING THE ELECTRIC HEAT PACKAGE

Remove the heat package from the shipping carton. The heat package must consist of the following:

1. Basic heater.
2. Electric heat control base and wiring.
3. Installation instructions.
4. Wiring diagram (2), one to be applied to unit.
5. Adhesive label to remark serial plate to indicate new model number. This is attached to the front of these instructions.

## WIRING MAIN POWER

1. On all installations, size unit power supply wiring for the minimum circuit ampacity requirement for the unit and heater package combination listed on the unit serial plate.

For existing installations, addition or upgrading of a heater package may require that larger supply wires be run to the unit. Resize all power supply wires for the minimum circuit ampacity rating listed on the unit serial plate that is applicable for your combination of unit and heater package.

### WARNING

Install properly sized power supply leads for the unit/heater combination minimum circuit ampacity as listed on the unit serial plate. Hazard of fire. Failure to install properly sized conductors could result in fire.


2. All heater packages covered by this manual are factory wired for a single supply circuit. The following heater packages are field convertible to a dual supply circuit if required or desired.

EHWA05-A15	EHWH04-A05
EHWA05-A20	EHWH04-A10
EHWH42-A05	EHWH04-A15
EHWH42-A10	EHWH04-A20
EHWH42-A15	

3. To convert the above heater packages to dual circuit configuration before installation, loosen 4 screws holding jumper bar in place. Remove jumper bar. Circuit A + B are now identified on the heater package. See FIGURE 1.

Wire should be sized to the minimum circuit ampacity as specified on the serial plates of units that accept these heater packages for circuits A + B.

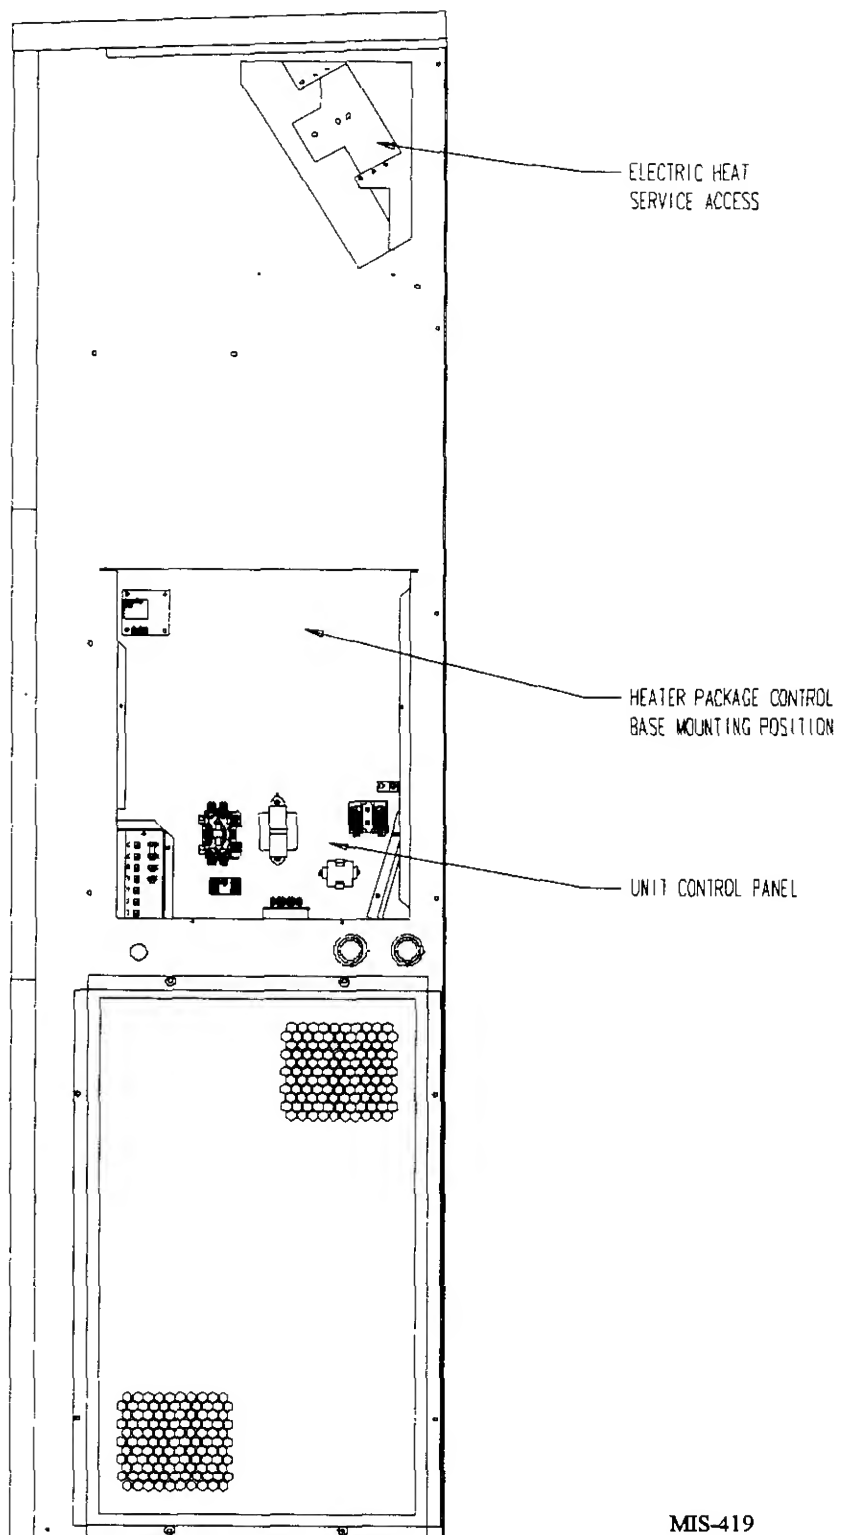FIGURE 2



MIS-419

## INSTALLATION

1. Disconnect all power to unit before installation.

### WARNING

Disconnect all power to unit before installing heater package.  
Hazard of electrical shock. Failure to disconnect power could result in injury or death.

2. Before installation, check unit serial plate to insure that the heater package model that you intend to install is listed as a heater package suitable for use with the unit.

Under no circumstances shall a heater package be installed in a unit if the model number of the heater package does not appear on the unit serial plate.

### WARNING

Install only heater packages listed on unit serial plate. Hazard of fire or electrical shock. Failure to install listed heater package could result in fire, injury or death

3. Remove electric heater access panel and control panel cover, both inner and outer. See FIGURE 2.
4. All heaters are installed with the thermal cutoffs positioned to the top of the unit. Install heat strip(s) through heater access opening. Position heat strip support rod in heater support hole 1, 2, or 3 as indicated in TABLE 1 and FIGURE 3. Secure in place with 2 sheet metal screws in mounting holes as indicated in TABLE 1 and FIGURE 3.  
  
On heater packages with 2 heat strips, install 9KW or 10KW heater first in position closest to the outlet air frame. See FIGURES 4E and 4F.
5. Install heater control base into top of control panel as shown in FIGURE 5. Secure with 4 sheet metal screws provided.
6. Plug male 6 pin connector into mating connector mounted in control panel. See FIGURE 5.
7. Connect red compressor supply lead to L1 of terminal block. Connect black compressor supply lead to L2 of terminal block. If 3 phase, connect yellow supply lead to L3 of terminal block. See FIGURE 5 and wiring diagram.
8. Route wires from heater control base up through raceway in top right corner of control panel to the heaters. See FIGURE 5.
9. Wire heater package per wiring diagram supplied with this heater package. All wires are stamped with wire numbers that correspond with terminal numbers on the wiring diagram and stamped numbers on the heat strip. Limit switch wires are terminated with insulated quick connect terminals. See FIGURE 4.
10. Attach adhesive wiring diagram directly above unit wiring diagram on inner control panel cover.
11. Recheck all wiring. Break out appropriate circuit breaker tabs on inner control panel cover to allow trip lever to protrude. Replace control panel and heater access panels
12. Resupply power to the unit and check for proper operation.
13. Remark serial plate with self-adhesive label attached to the front of this manual. See FIGURE 6.

TABLE 2

	Heater Package Model Number	Figure 4 Heater Terminal Identification Drawing	Figure 3 Rod Support and Screw Mounting Position
1	EHWA05-A05	4A	1
2	EHWA05-A10	4B	1
3	EHWA05-A15	4C	1 + 3
4	EHWA05-A20	4F	1 + 3
5	EHWA05-B09	4D	1
6	EHWA05-B15	4E	1 + 3
7	EHWA05-B18	4E	1 + 3
8	EHWA05-C09	4D	1
9	EHWA05A-C15	4E	1 + 3
10	EHWH42-A05	4A	1
11	EHWH42-A10	4B	1
12	EHWH42-A15	4C	1 + 3
13	EHWH04-A05	4A	1
14	EHWH04-A10	4B	1
15	EHWH04-A15	4C	1 + 3
16	EHWH04-A20	4F	1 + 3
17	EHWH05-B09	4D	1
18	EHWH05-B15	4E	1 + 3
19	EHWH04-B18	4E	1 + 3
20	EHWH05-C09	4D	1
21	EHWH05-C15	4E	1 + 3
22	EHWA60-B09	4B	1

FIGURE 3

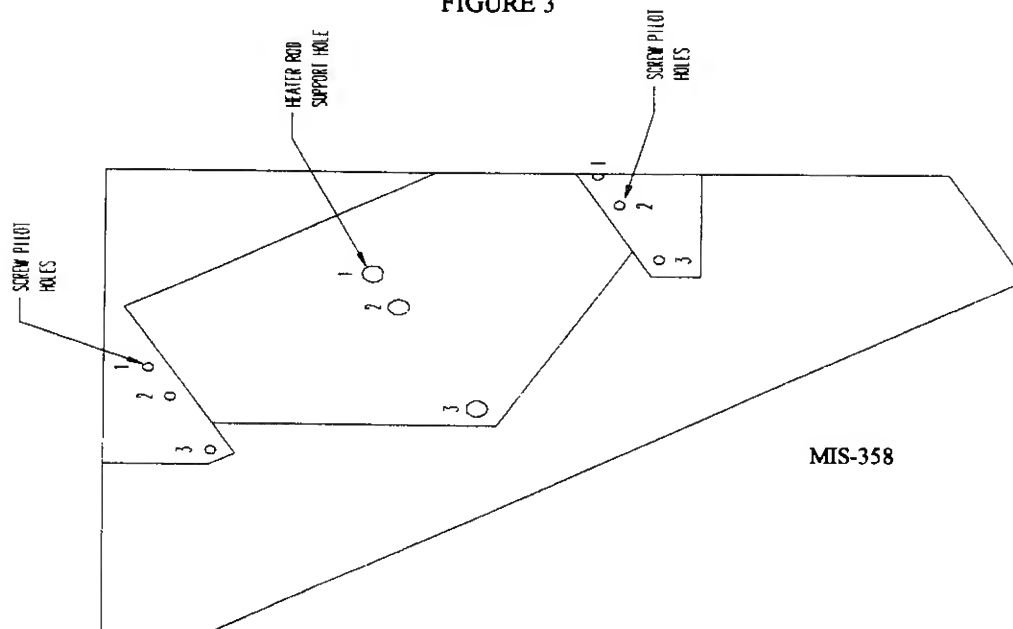
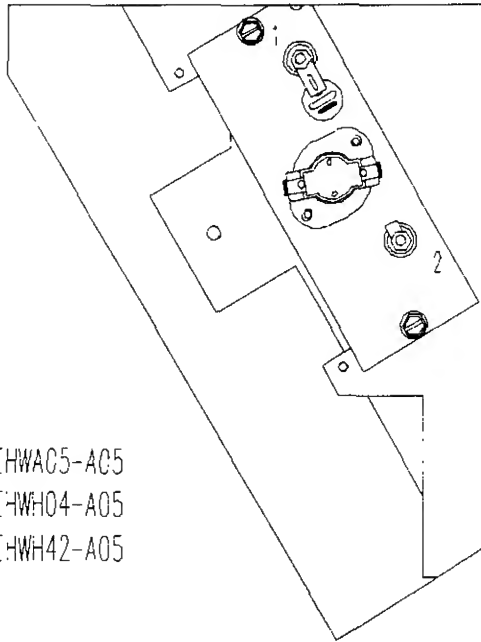


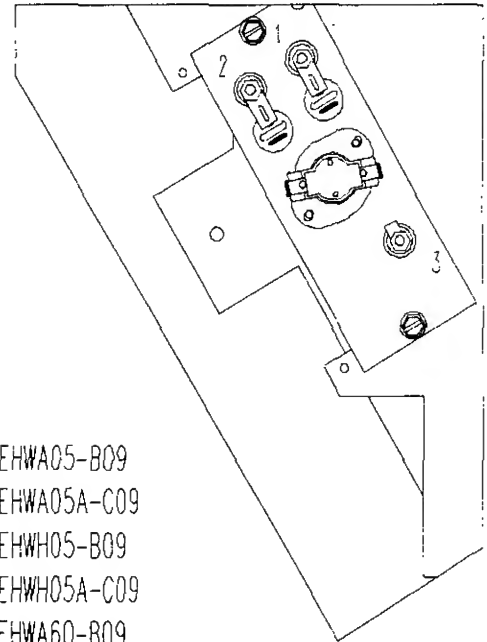


FIGURE 4A




EHWA05-A05  
EHW04-A05  
EWH42-A05

FIGURE 4B




EHWA05-B09  
EHWA05A-C09  
EHW05-B09  
EHW05A-C09  
EHW60-B09

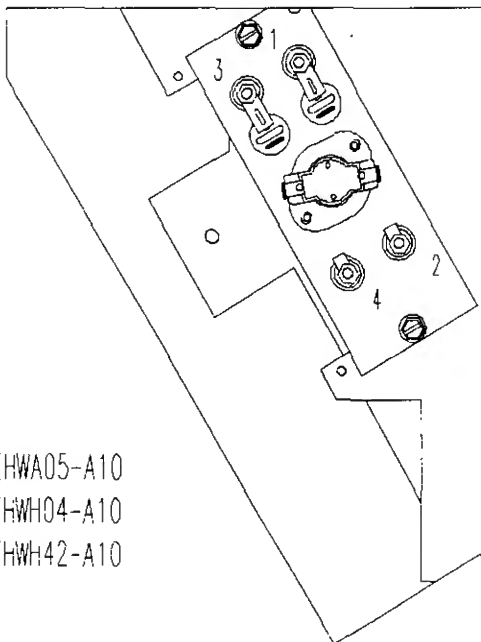FIGURE 4C



EHWA05-A10  
EHW04-A10  
EWH42-A10

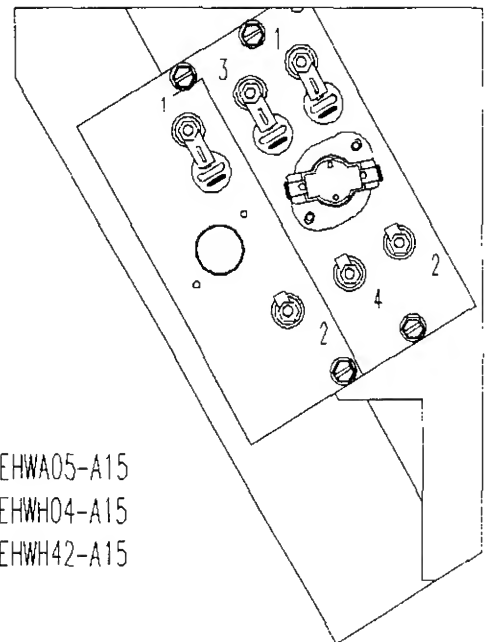FIGURE 4D



EHWA05-A15  
EHW04-A15  
EWH42-A15

NOTE: THERMAL CUTOFFS TO BE AT  
TOP OF AIR FRAME WHEN INSTALLING.

M:S-42G

FIGURE 4E



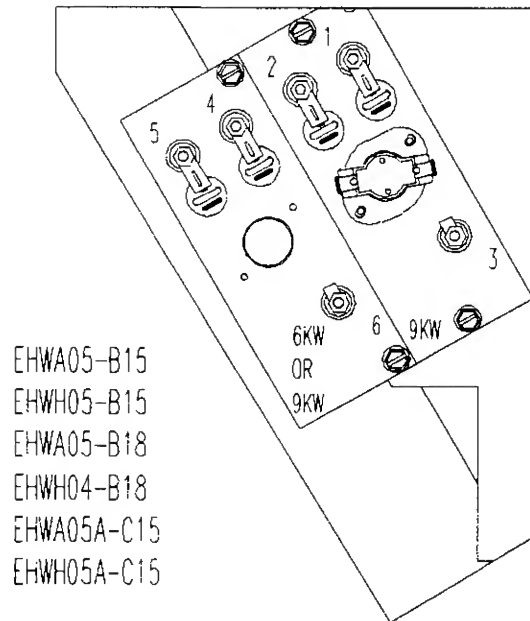


FIGURE 4F

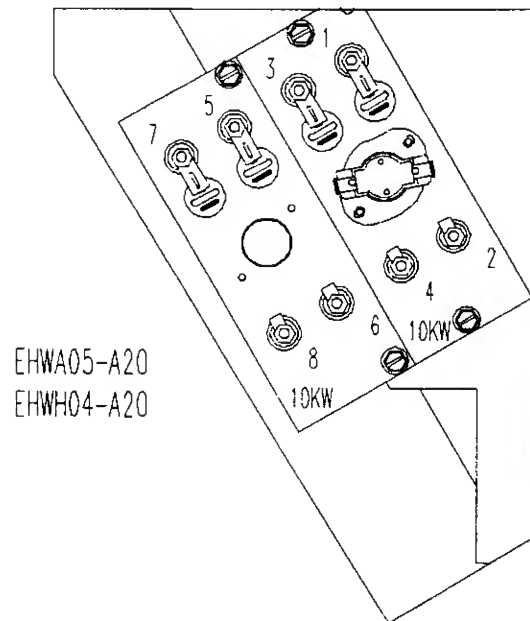

NOTE: THERMAL CUTOFFS TO BE AT  
 TOP OF AIR FRAME WHEN INSTALLING.

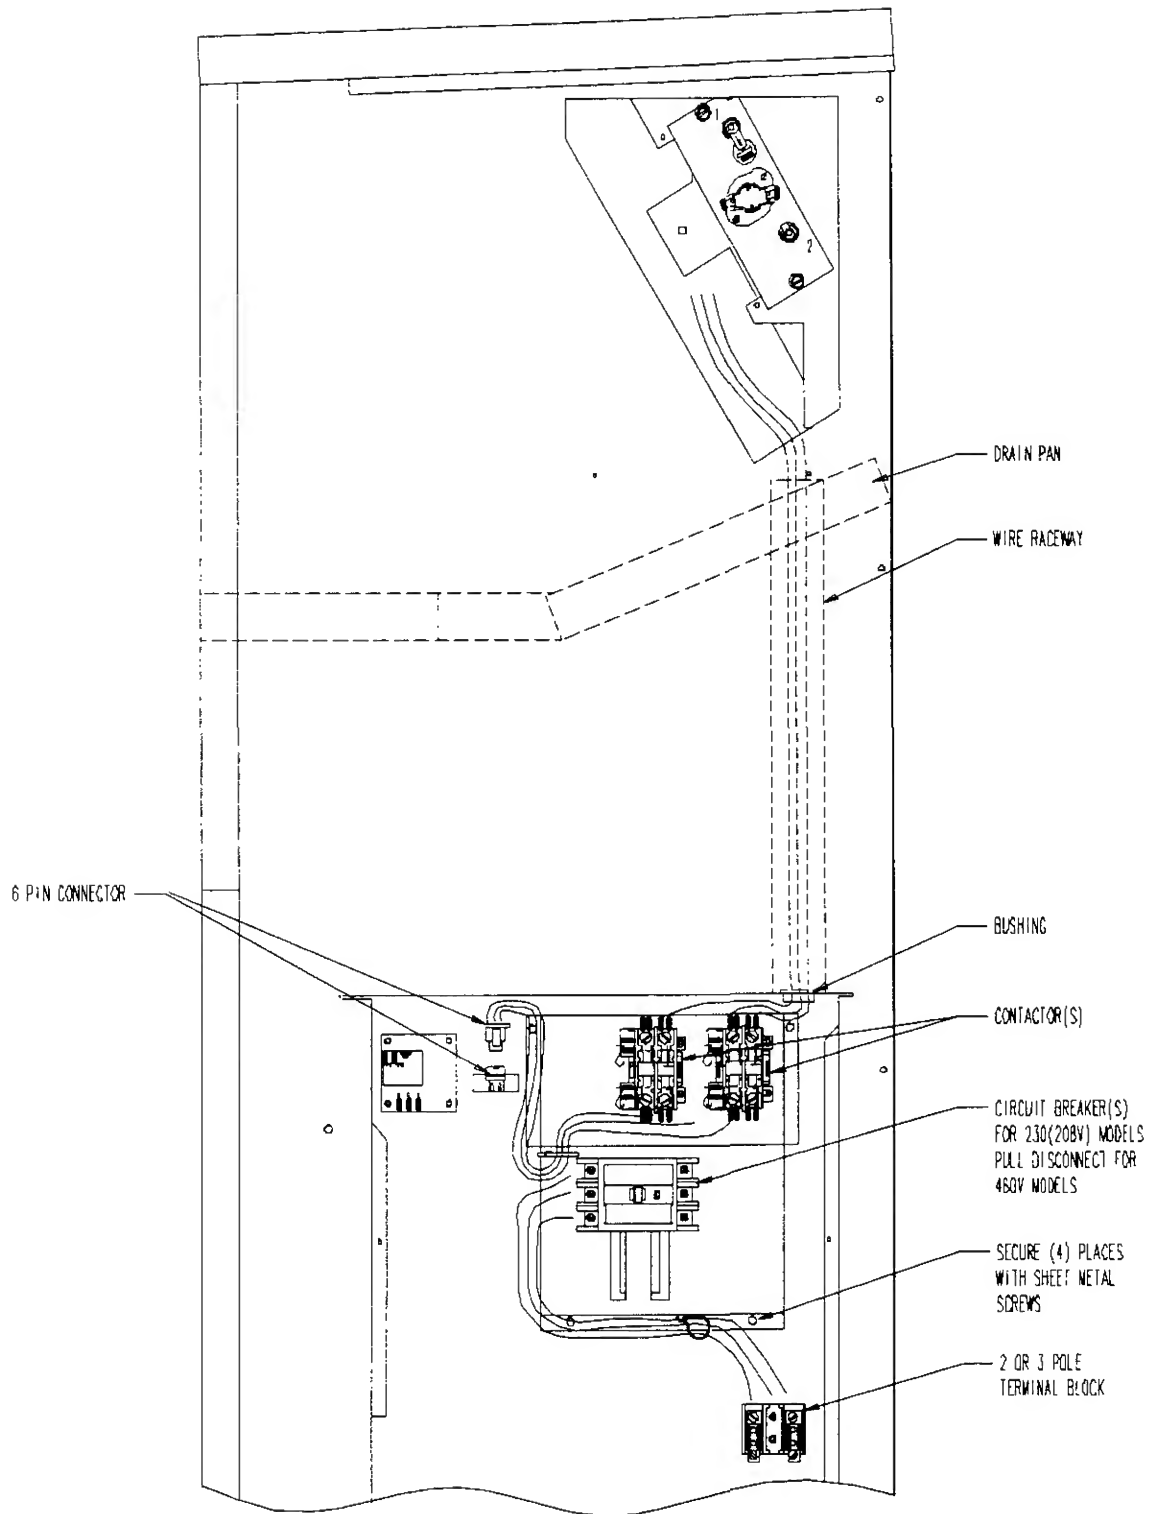FIGURE 5



MIS-422

FIGURE 6

INSTALL ONLY HEATER PACKAGES LISTED HERE.

BARD MANUFACTURING COMPANY, 1914 RANDOLPH DRIVE

(1)  
APPROVED  
HEATER  
PACKAGE

MODEL	VAC	HZ
WA361-A0012345	230/208	60
WA361-A0512345	230/208	60
WA361-A0812345	230/208	60
WA361-A1012345	230/208	60
WA361-A1512345	230/208	60

BRANCH CIRCUIT SELECT CURRENT 17 OPERATION

SERIAL NUMBER 125H920711193-01 UL FILE NO.

SUITABLE FOR OUTDOOR USE

	VAC	HZ	ELECTRICAL	
			PH	HP
COMPRESSOR	230/208	60	1	
OUTDOOR MOTOR	230/208	60	1	1/5
INDOOR MOTOR	230/208	60	1	1/3
HEATER PACKAGE				KW
EHWA03-A05	240/208	60	1	5/3.75
EHWA03-A08	240/208	60	1	8/6
EHWA03-A10	240/208	60	1	10/7.5
EHWA03-A15	240/208	60	1	15/11.25

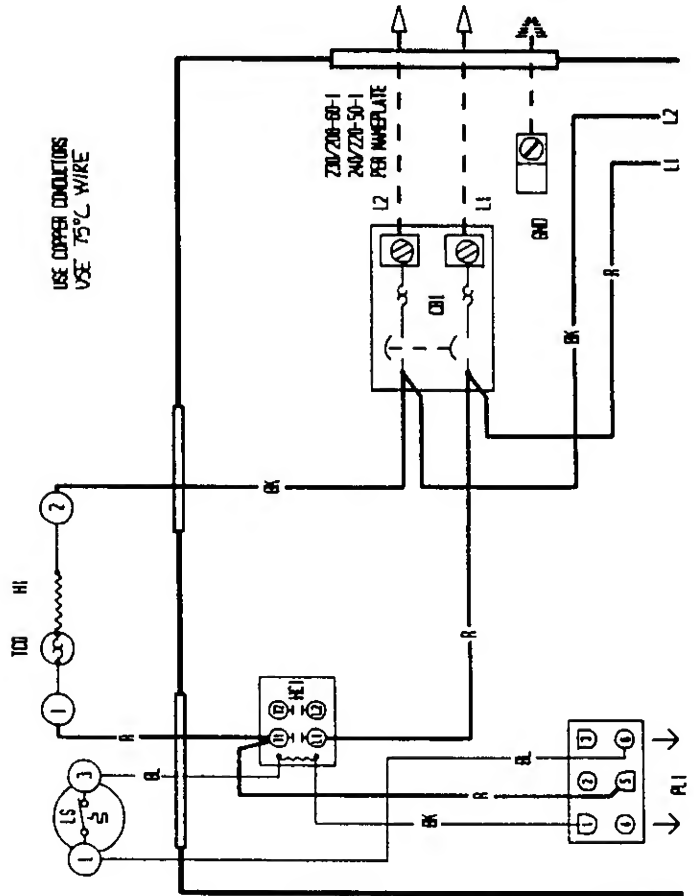
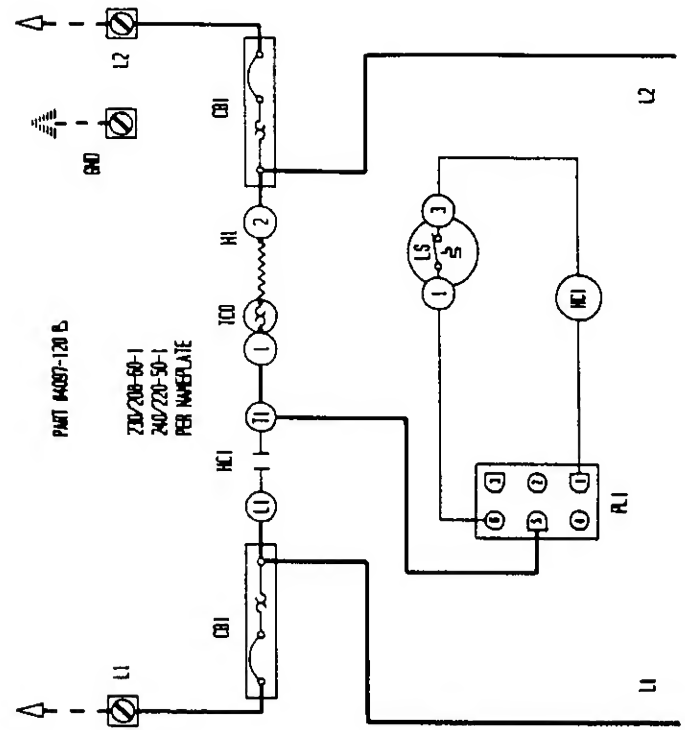
FACTORY CHARGED R22: 68 OZ. DESI

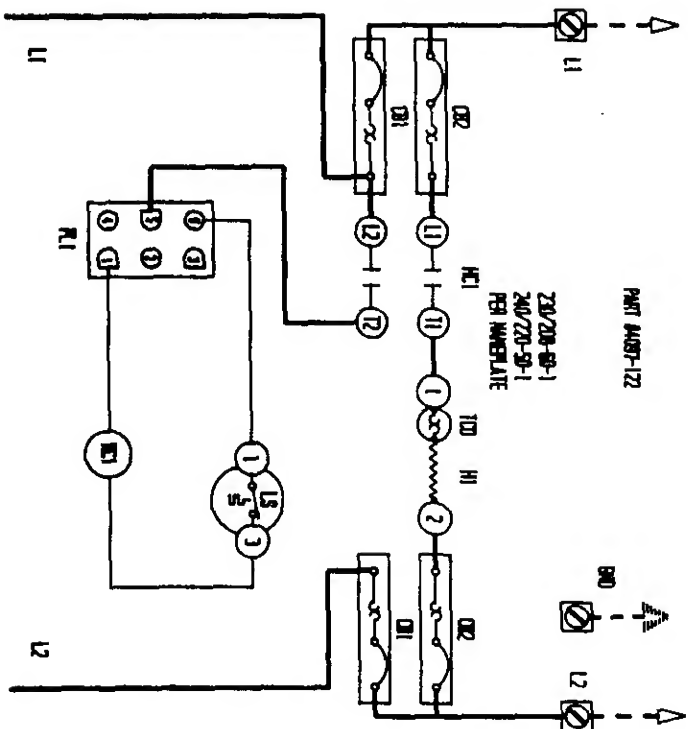
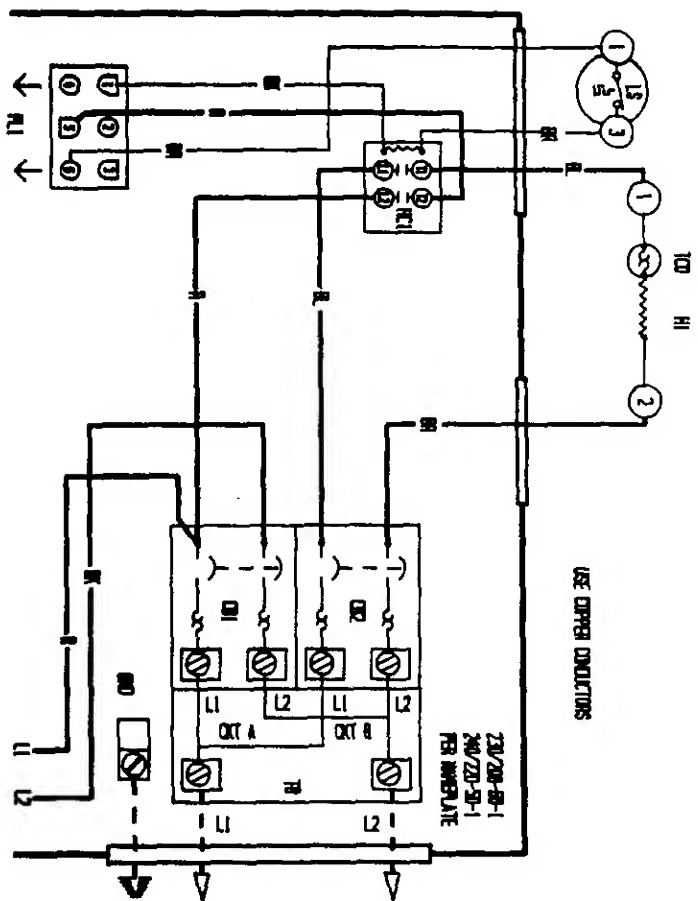
-- FACTORY

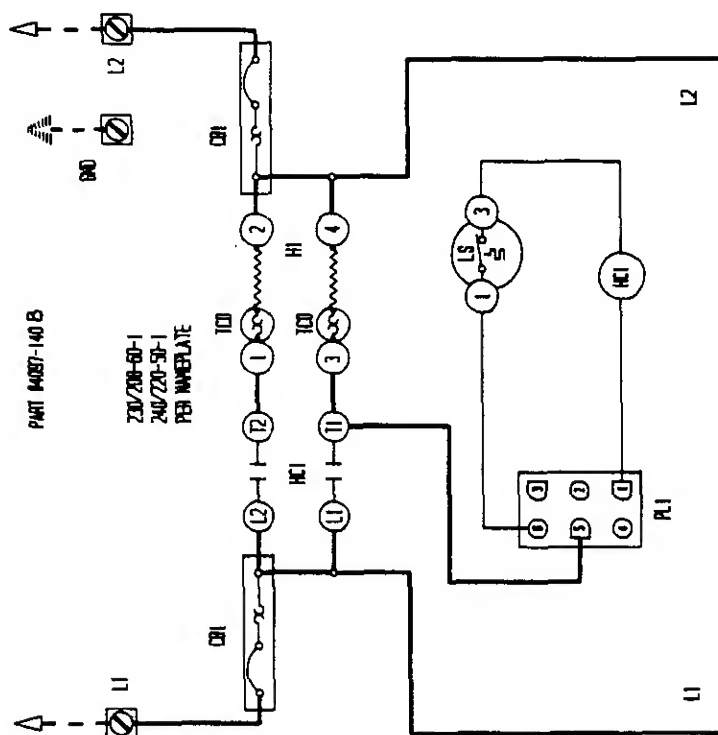
-- CLEAR

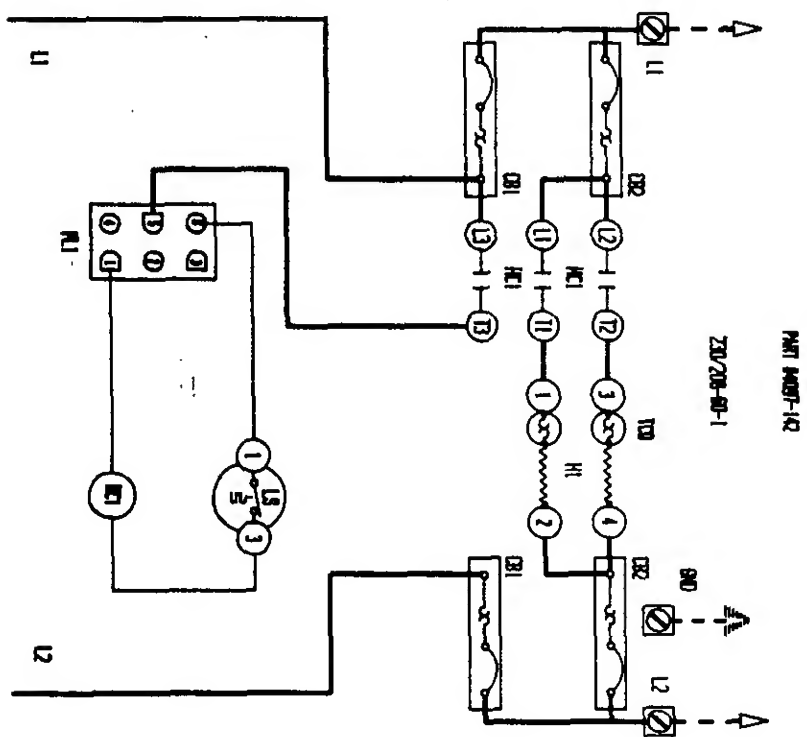
ASSURE THAT SERIAL PLATE IS CLEAN AND DRY. REMOVE APPROPRIATE LABEL STRIP FOR KW REQUIRED AND REMARK SERIAL PLATE AS SHOWN FOR THE HEATER PACKAGE THAT IS INSTALLED

MIS-384

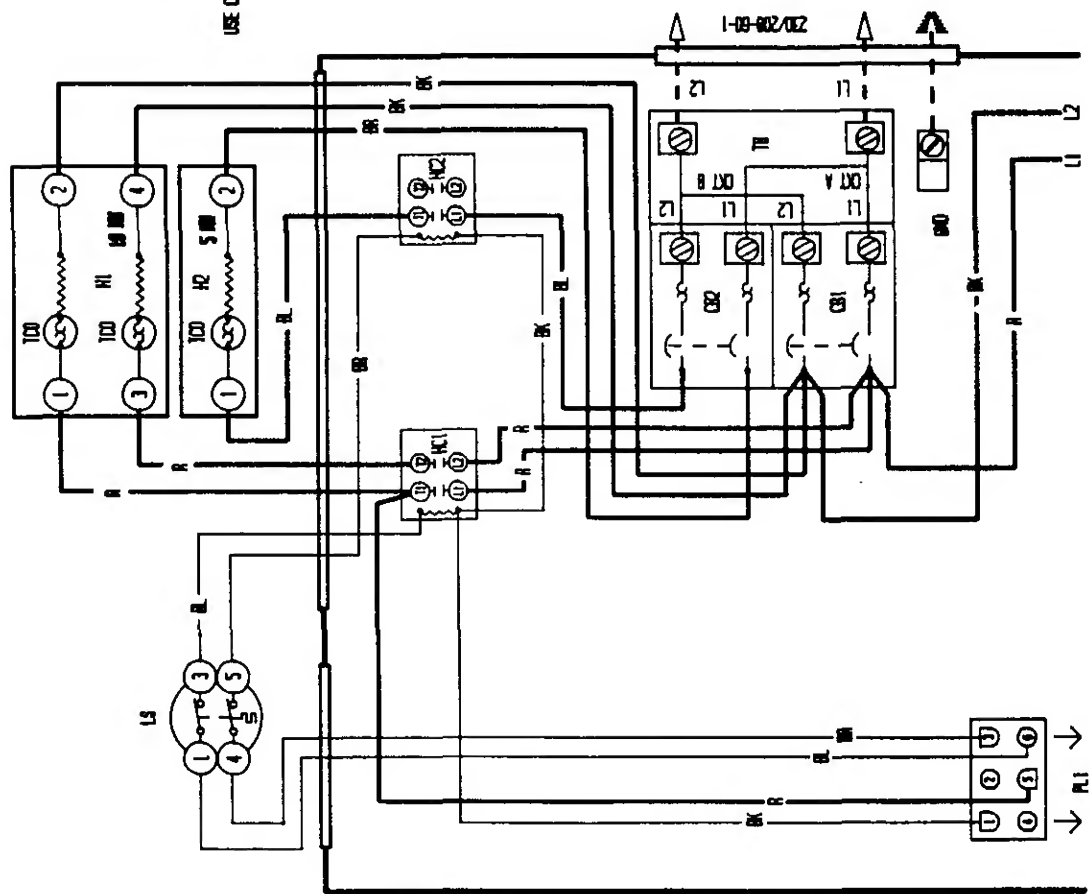














USE COPPER CONDUITS


PART M/027-152

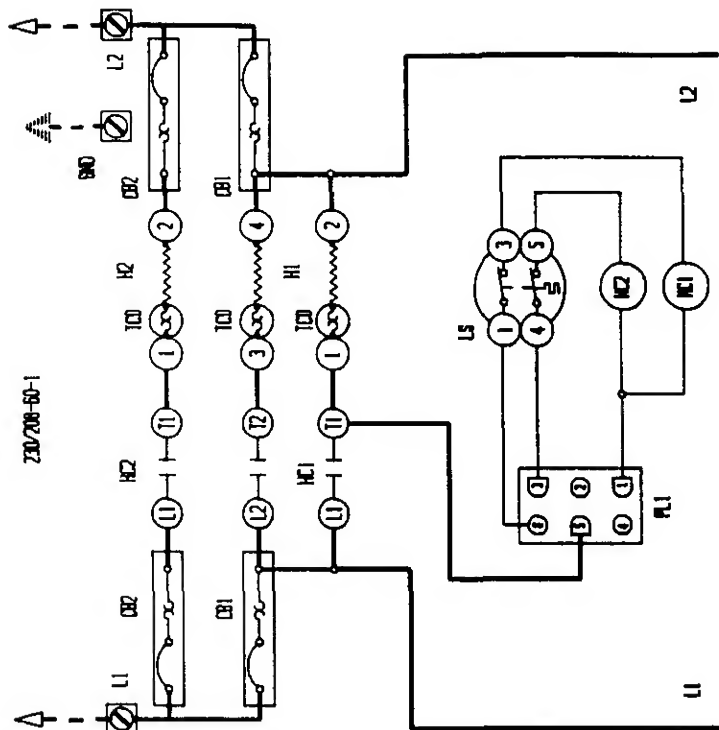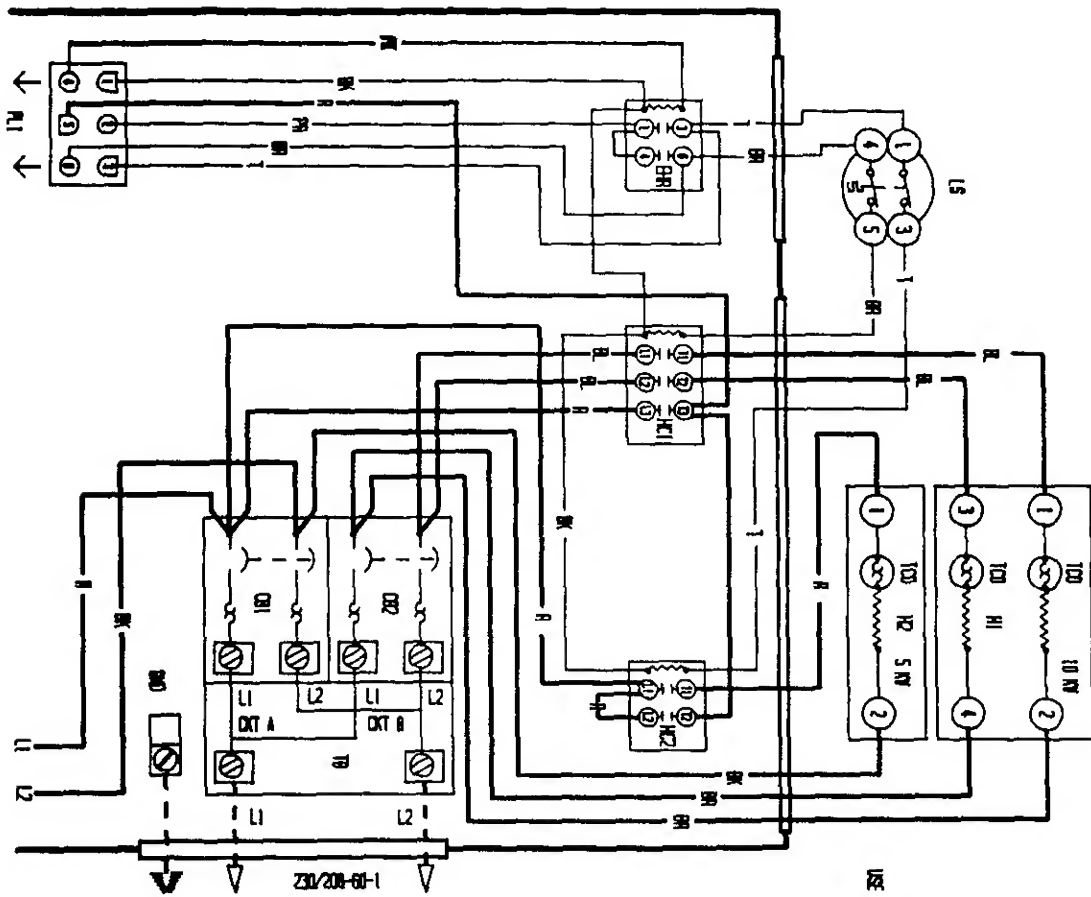230/208-50-1






USE DIFFER CONNECTORS

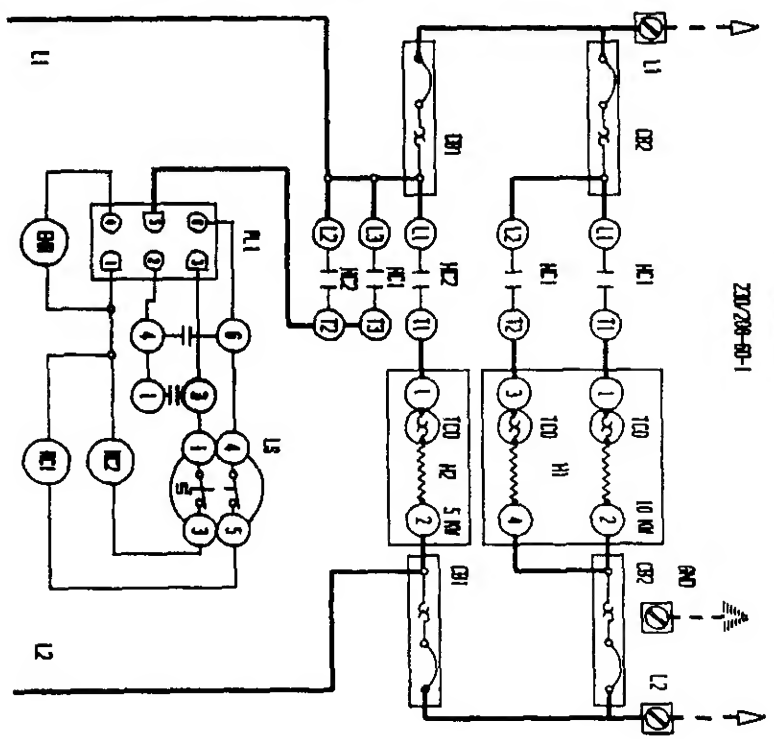


PART 1487-153  
Z10/20-10-1


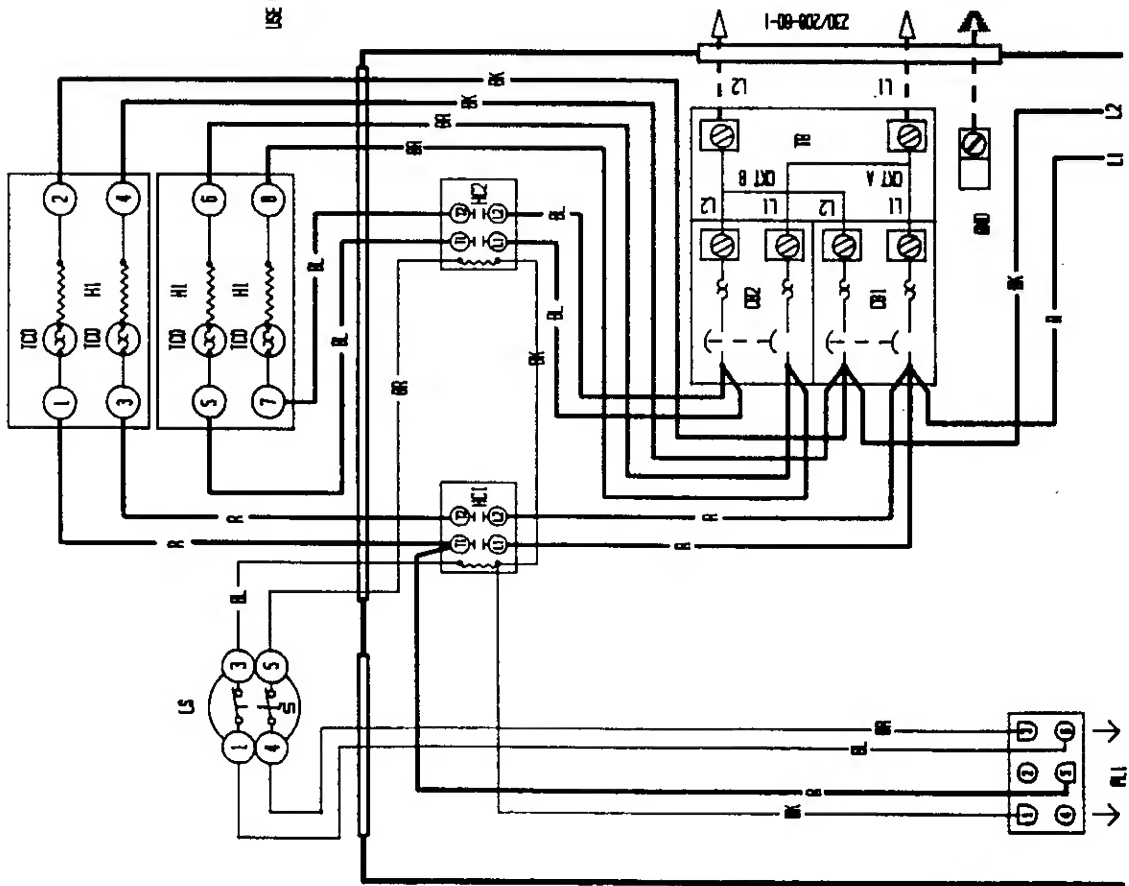



USE COPPER CONDUITS


PART 14057-100

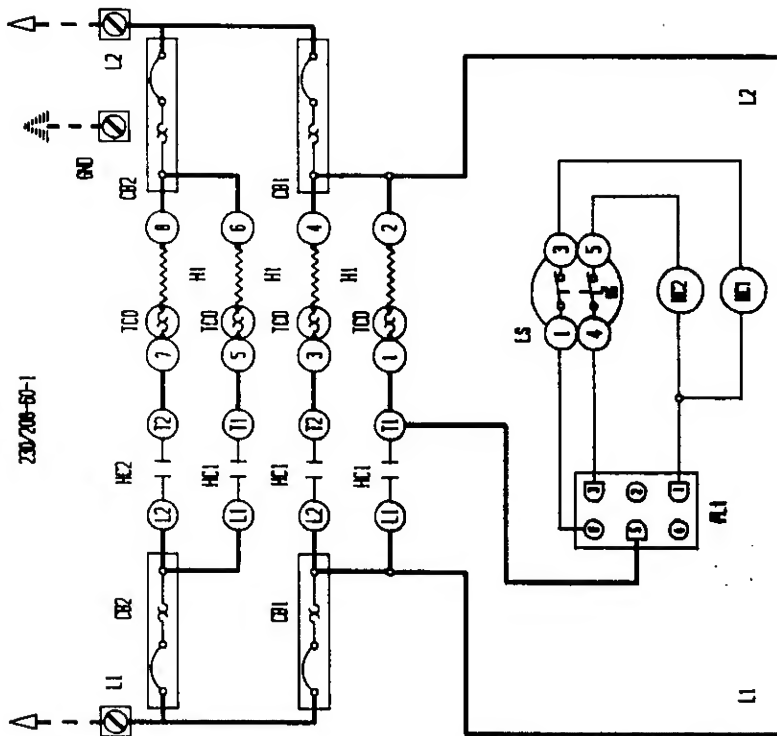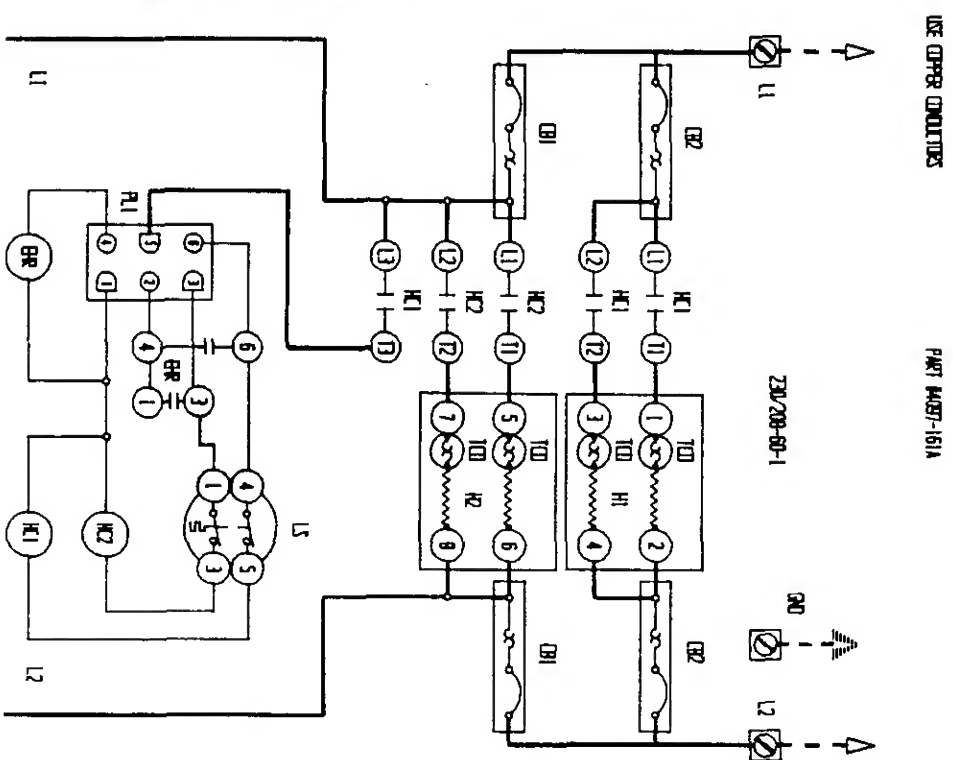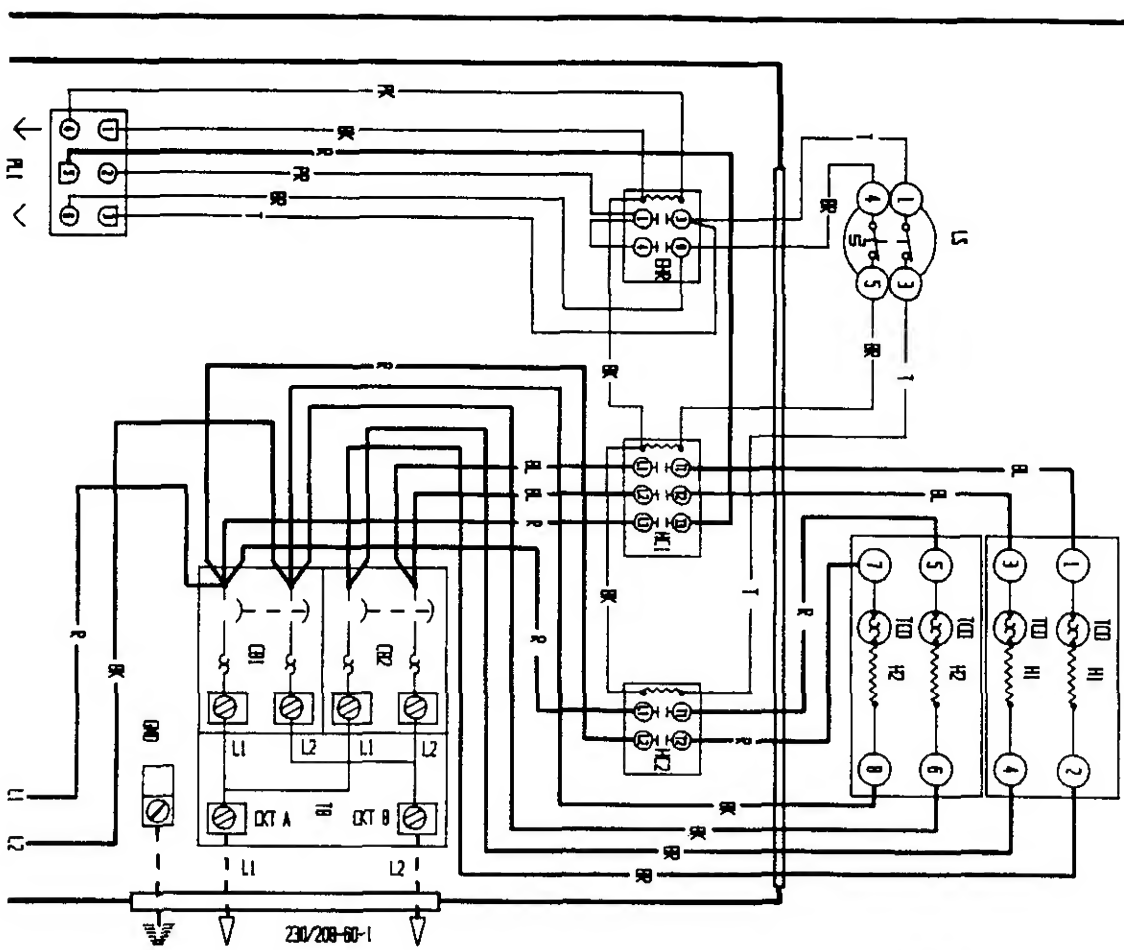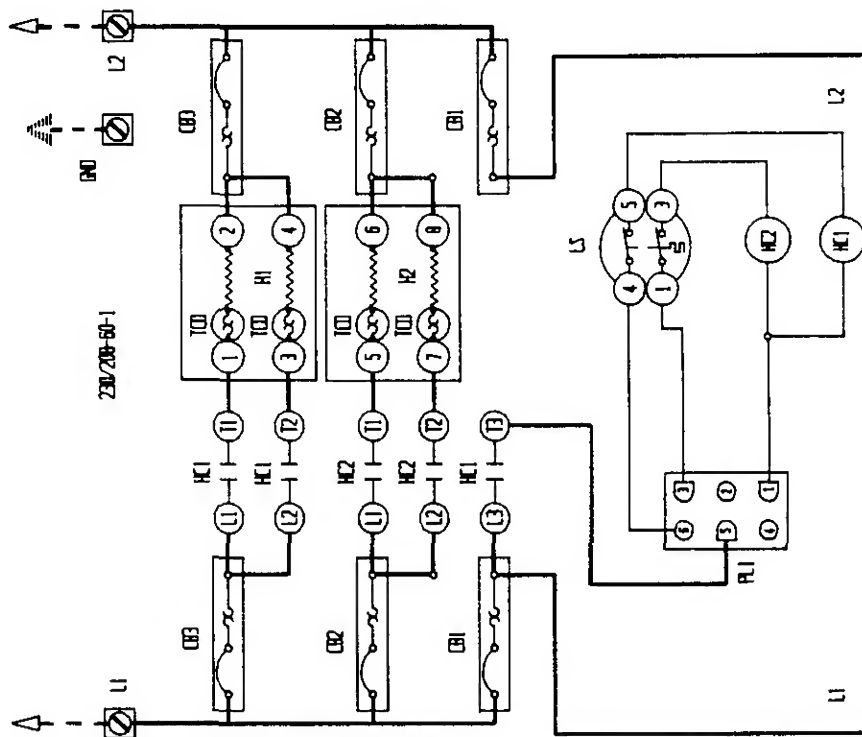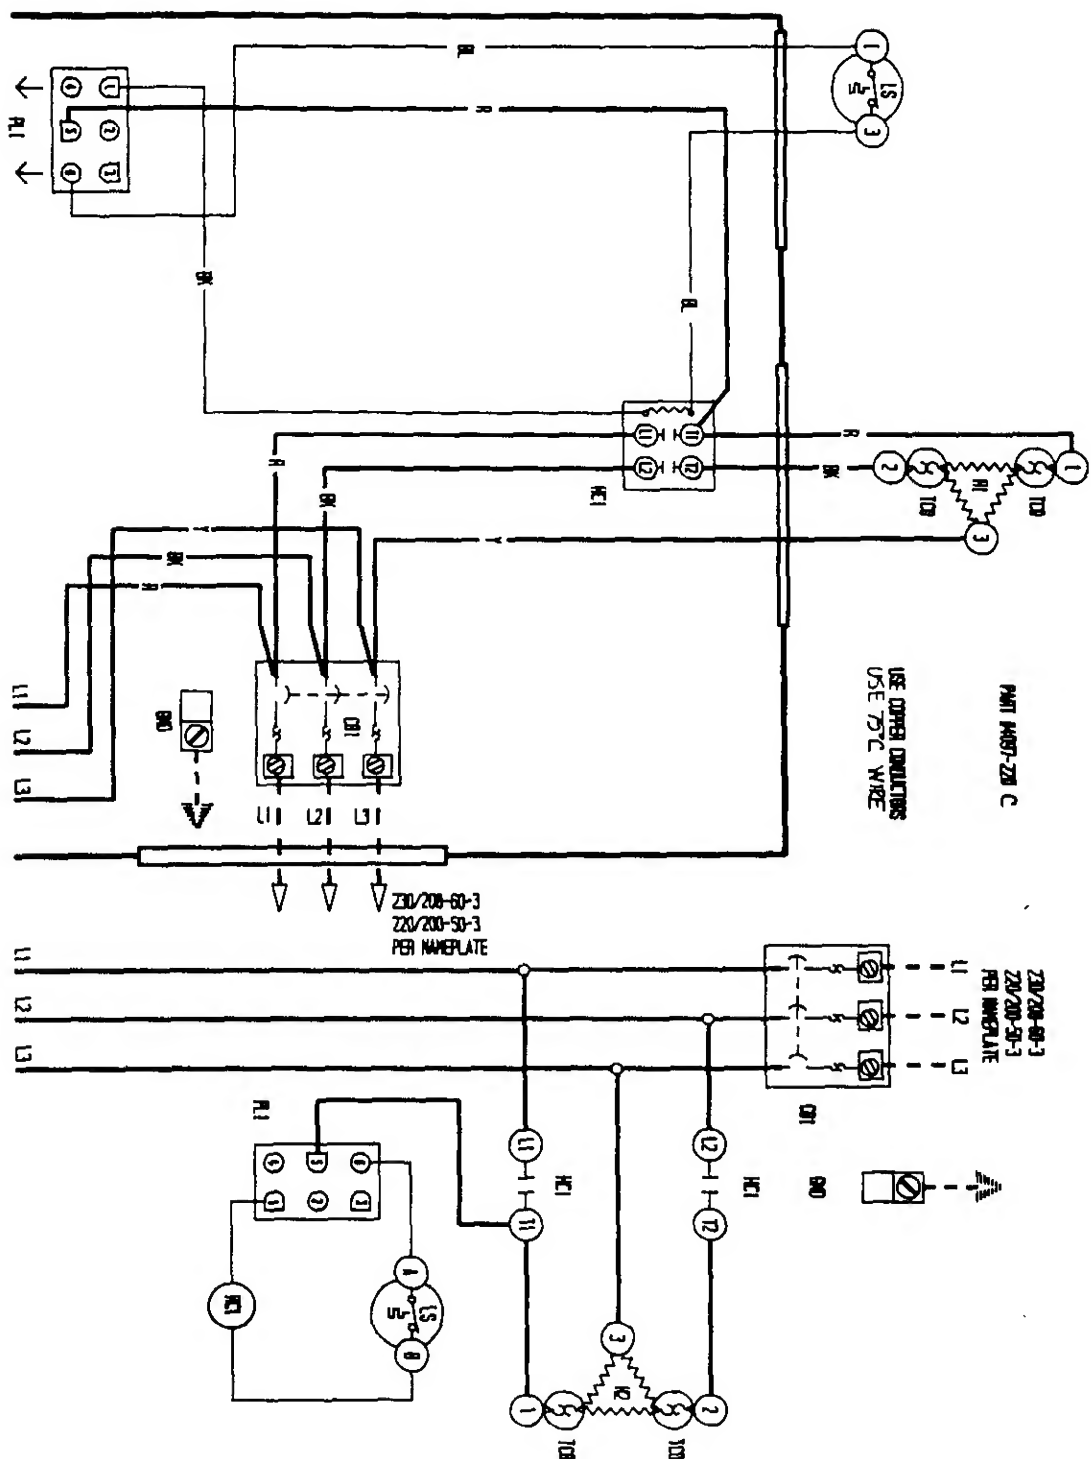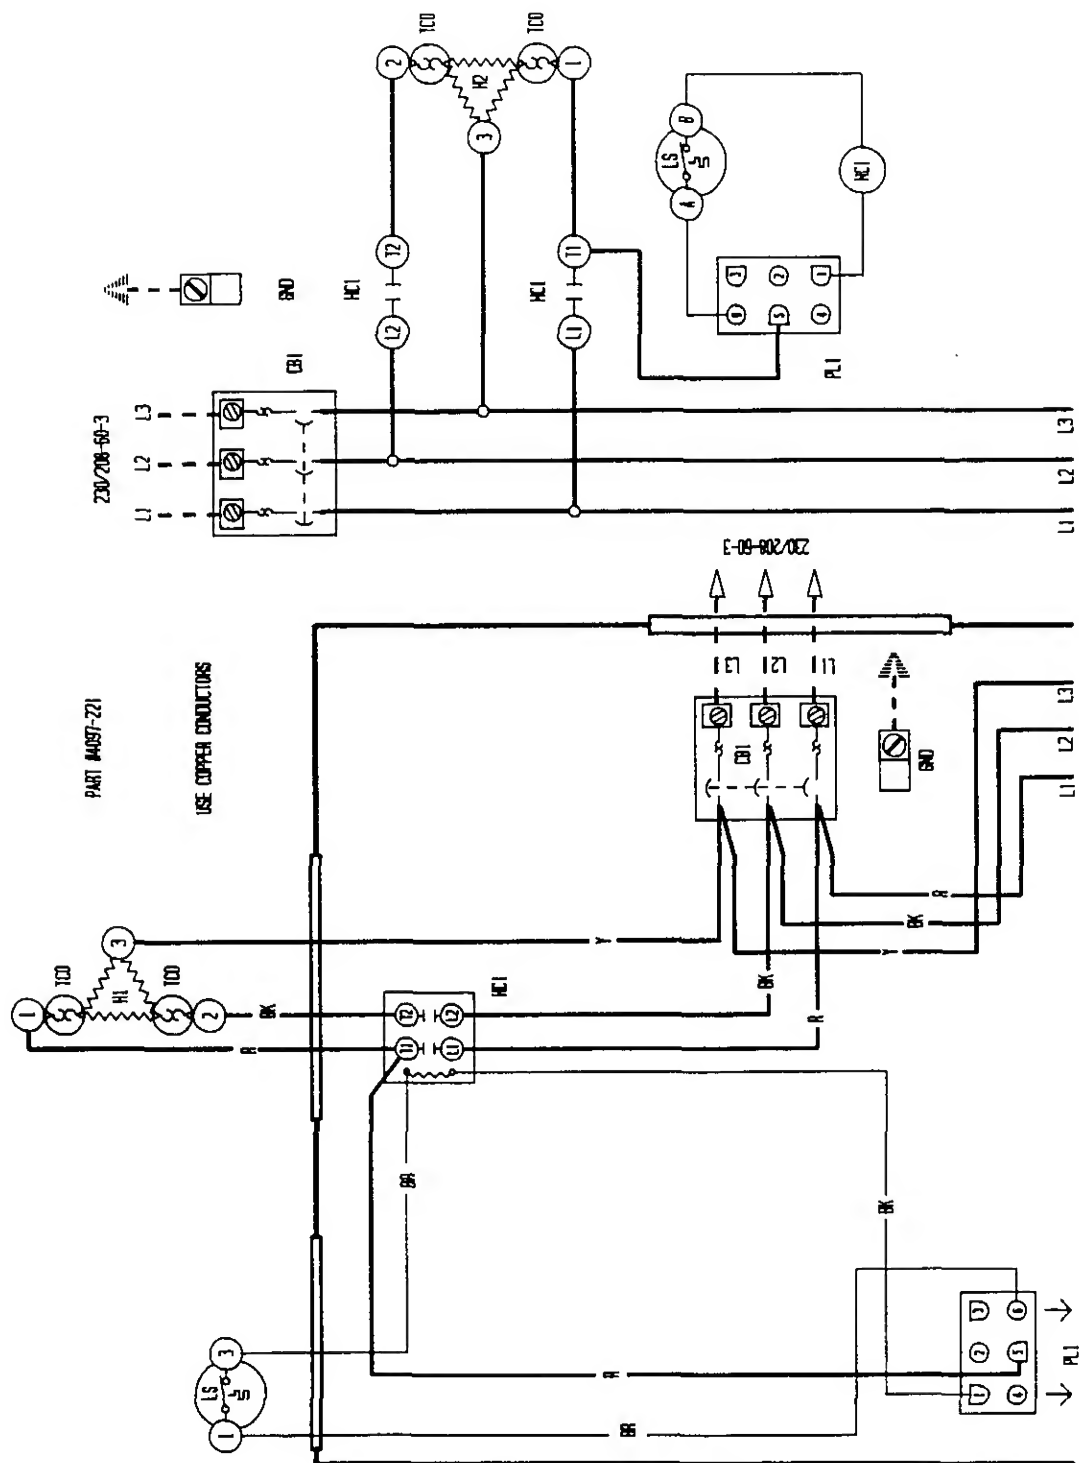
230/208-50-1

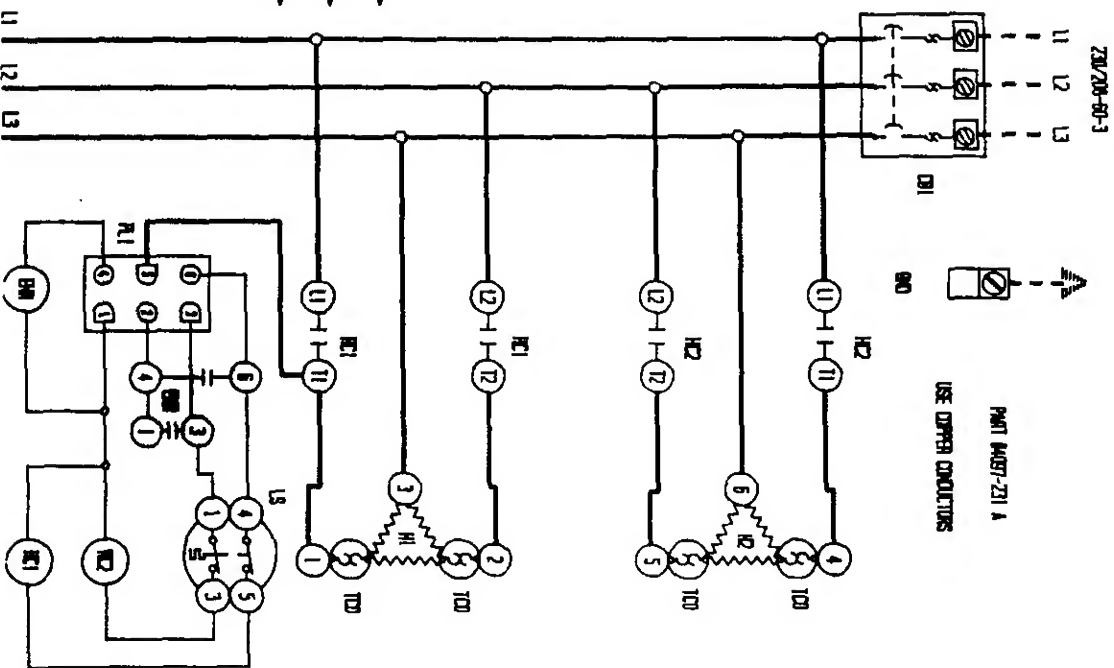
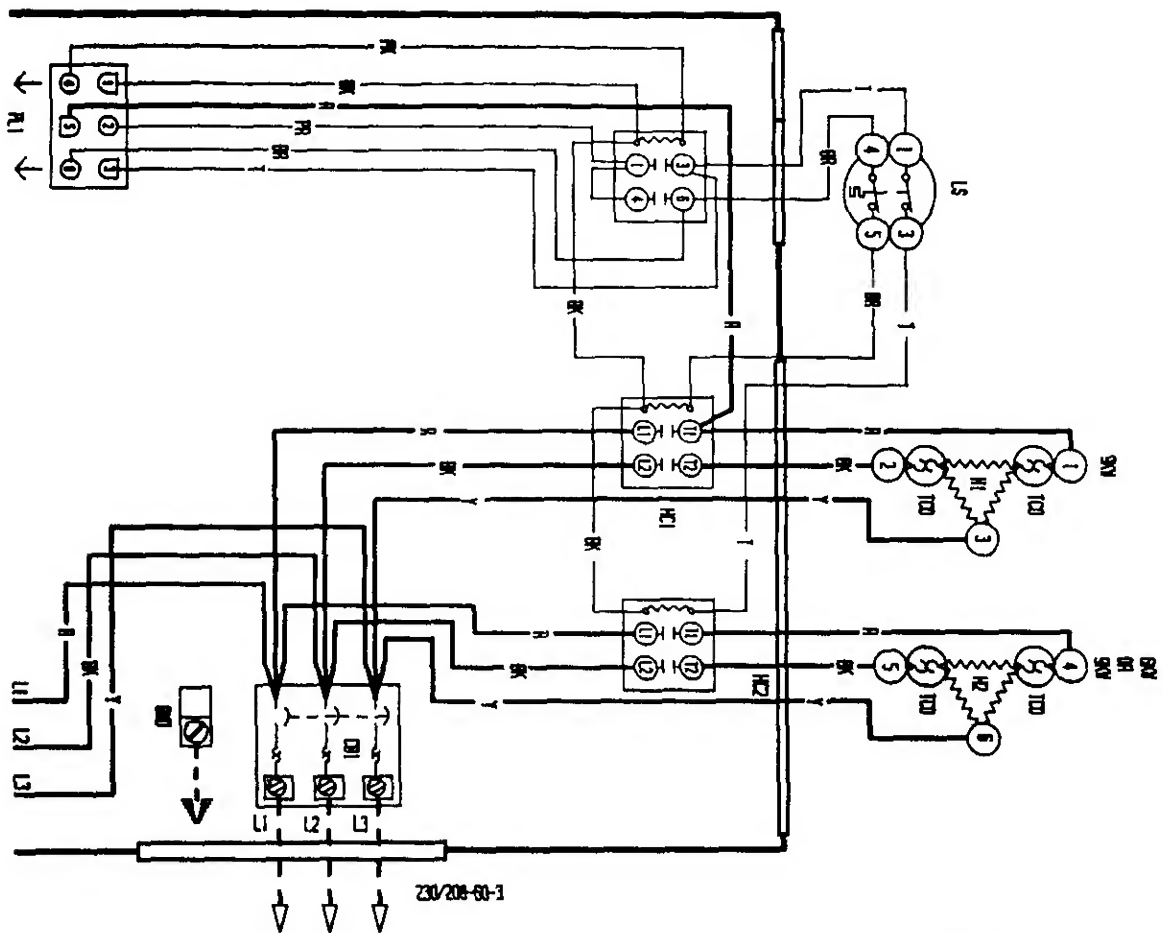




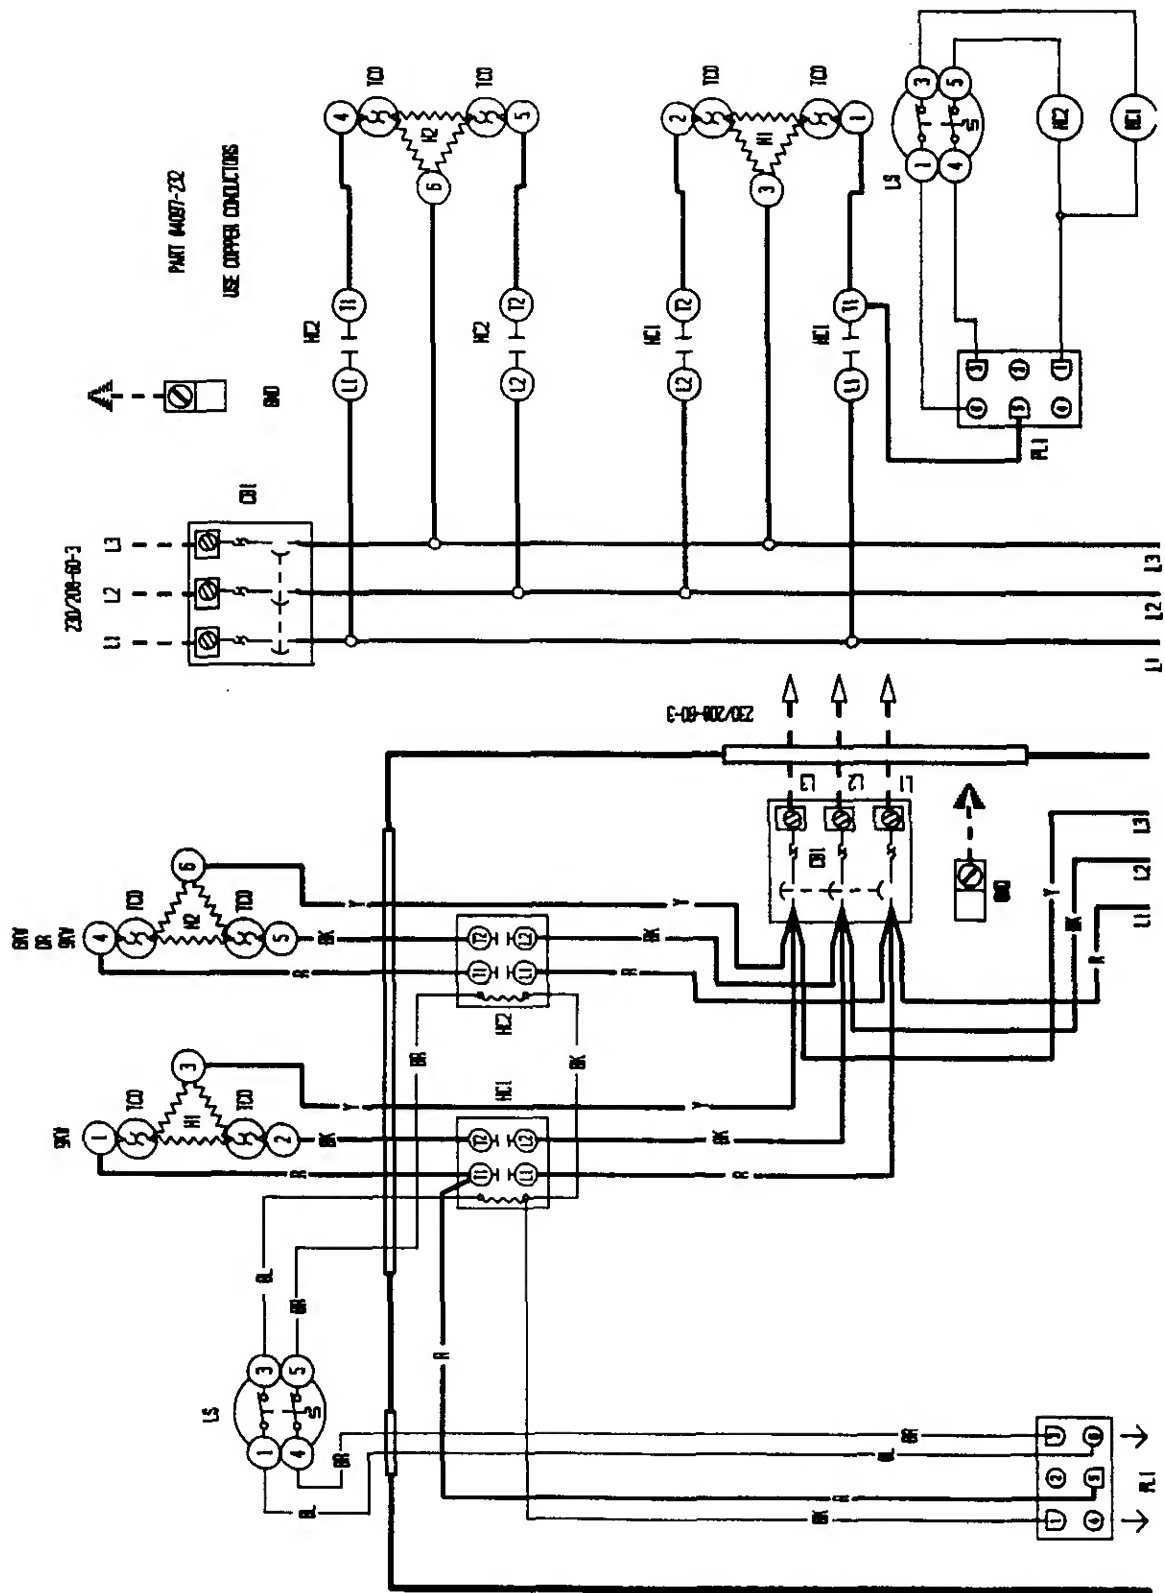












PART 4407-232  
 USE DIFFER CONNECTIONS  
 230/208-60-3  
 L1 L2 L3  
 1 2 3 4 5 6  
 11 12 13 14 15 16  
 17 18 19 20 21 22  
 23 24 25 26 27 28  
 29 30 31 32 33 34  
 35 36 37 38 39 40  
 41 42 43 44 45 46  
 47 48 49 50 51 52  
 53 54 55 56 57 58  
 59 60 61 62 63 64  
 65 66 67 68 69 70  
 71 72 73 74 75 76  
 77 78 79 80 81 82  
 83 84 85 86 87 88  
 89 90 91 92 93 94  
 95 96 97 98 99 100  
 101 102 103 104 105 106  
 107 108 109 110 111 112  
 113 114 115 116 117 118  
 119 120 121 122 123 124  
 125 126 127 128 129 130  
 131 132 133 134 135 136  
 137 138 139 140 141 142  
 143 144 145 146 147 148  
 149 150 151 152 153 154  
 155 156 157 158 159 160  
 161 162 163 164 165 166  
 167 168 169 170 171 172  
 173 174 175 176 177 178  
 179 180 181 182 183 184  
 185 186 187 188 189 190  
 191 192 193 194 195 196  
 197 198 199 200 201 202  
 203 204 205 206 207 208  
 209 210 211 212 213 214  
 215 216 217 218 219 220  
 221 222 223 224 225 226  
 227 228 229 230 231 232  
 233 234 235 236 237 238  
 239 240 241 242 243 244  
 245 246 247 248 249 250  
 251 252 253 254 255 256  
 257 258 259 260 261 262  
 263 264 265 266 267 268  
 269 270 271 272 273 274  
 275 276 277 278 279 280  
 281 282 283 284 285 286  
 287 288 289 290 291 292  
 293 294 295 296 297 298  
 299 300 301 302 303 304  
 305 306 307 308 309 310  
 311 312 313 314 315 316  
 317 318 319 320 321 322  
 323 324 325 326 327 328  
 329 330 331 332 333 334  
 335 336 337 338 339 340  
 341 342 343 344 345 346  
 347 348 349 350 351 352  
 353 354 355 356 357 358  
 359 360 361 362 363 364  
 365 366 367 368 369 370  
 371 372 373 374 375 376  
 377 378 379 380 381 382  
 383 384 385 386 387 388  
 389 390 391 392 393 394  
 395 396 397 398 399 400  
 401 402 403 404 405 406  
 407 408 409 410 411 412  
 413 414 415 416 417 418  
 419 420 421 422 423 424  
 425 426 427 428 429 430  
 431 432 433 434 435 436  
 437 438 439 440 441 442  
 443 444 445 446 447 448  
 449 450 451 452 453 454  
 455 456 457 458 459 460  
 461 462 463 464 465 466  
 467 468 469 470 471 472  
 473 474 475 476 477 478  
 479 480 481 482 483 484  
 485 486 487 488 489 490  
 491 492 493 494 495 496  
 497 498 499 500 501 502  
 503 504 505 506 507 508  
 509 510 511 512 513 514  
 515 516 517 518 519 520  
 521 522 523 524 525 526  
 527 528 529 530 531 532  
 533 534 535 536 537 538  
 539 540 541 542 543 544  
 545 546 547 548 549 550  
 551 552 553 554 555 556  
 557 558 559 560 561 562  
 563 564 565 566 567 568  
 569 570 571 572 573 574  
 575 576 577 578 579 580  
 581 582 583 584 585 586  
 587 588 589 590 591 592  
 593 594 595 596 597 598  
 599 600 601 602 603 604  
 605 606 607 608 609 610  
 611 612 613 614 615 616  
 617 618 619 620 621 622  
 623 624 625 626 627 628  
 629 63

